



Please check dust covers at the joints of your steering & suspension parts occasionally.

Function of dust cover

- The dust cover protects the joint part from water and dust.
- It also keeps the grease inside for the grease-up type joint.
- **Dust covers for Grease-in type joint has a slit to eject old (odd) grease when filling up the new grease.



If you find a dust cover torn, replace the whole product immediately!



If the dust cover is broken, the ball stud is getting rusty and worn out. It is getting loose and might be coming out in the worst case.



■ Loose joint causes unstable steering, extraordinary noise and more serious troubles, if the ball stud falls out.

SANKEI INDUSTRY CO.,LTD.JAPAN

STEERING & SUSPENSION PARTS



555 uses high-quality dust covers

Our dust covers pass the severe tests for your safety driving!

Temperature Resistance

- It is conducted long running tests in the air between -40°C and+100°C.
- It performs well in a long run.

Grease Resistance

- It is placed in the container filled with grease for a long time.
- It stands still in a good condition for many years.

Weather Resistance

- It is kept in the artificial ozonized air.
- It maintains the rubber quality in the normal weather for more than 10 years.











Only the durable dust covers passed the severe tests are used for the top quality 555 Steering & Suspension Parts.

