

Rack End is the core part in the steering.



What is Rack End?

 
 
It has a function to transmit the control force of a steering wheel to a wheel.
It keeps steering stable by absorbing the shocks and the vibrations from the road surface.

- *Do you adjust a steering wheel for driving straight ?*
- *Does the end play in the steering wheel become bigger when stopping the car ?*



want to drive straight ...

Is the "End Play" so much ?

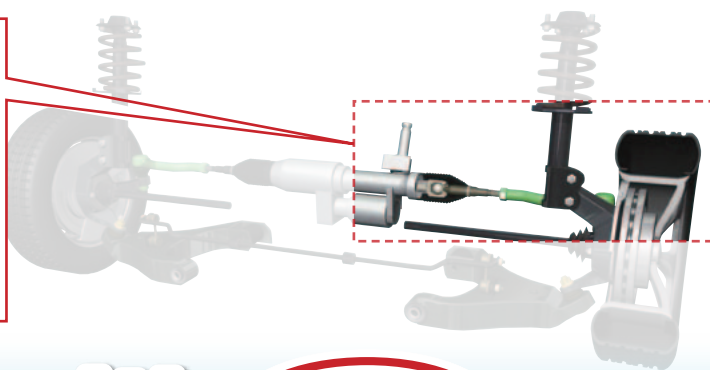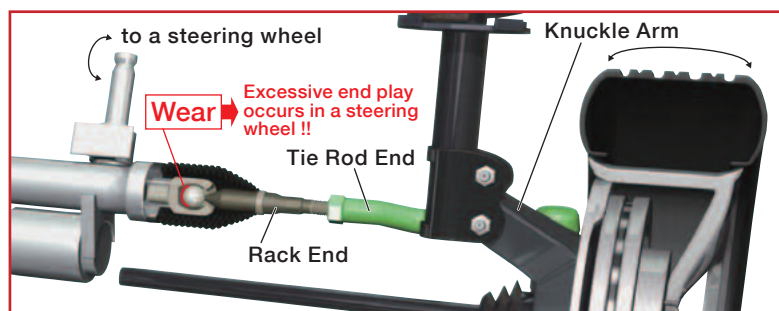

Replace with 555 high quality Rack End !!

 
SANKEI INDUSTRY CO.,LTD.JAPAN
STEERING & SUSPENSION PARTS

305 TAKANO RITTO SHIGA 520-3045 JAPAN [PHONE]81-77-553-0555 [FAX]81-77-553-2408
<http://www.sankei-555.co.jp/> [Mail]info@sankei-555.co.jp



*The reason why **555** can provide high quality !!*


▼ Stability with the robot arm

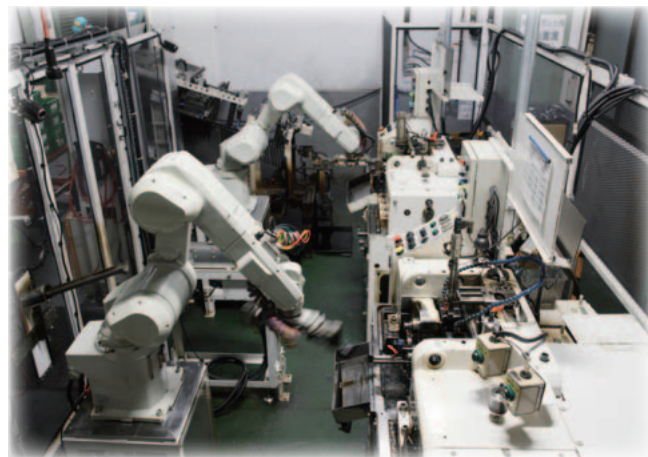

▼ Reliable performance with the durability evaluation



 
▼ Every product is tested with the automatic inspection machine

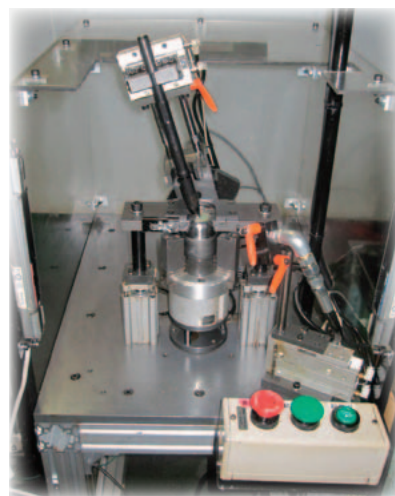

Recommended way to replace Rack End.

*keep the same dimension of "L" as before.

 *replace both Tie Rod End and Rack End at the same time.

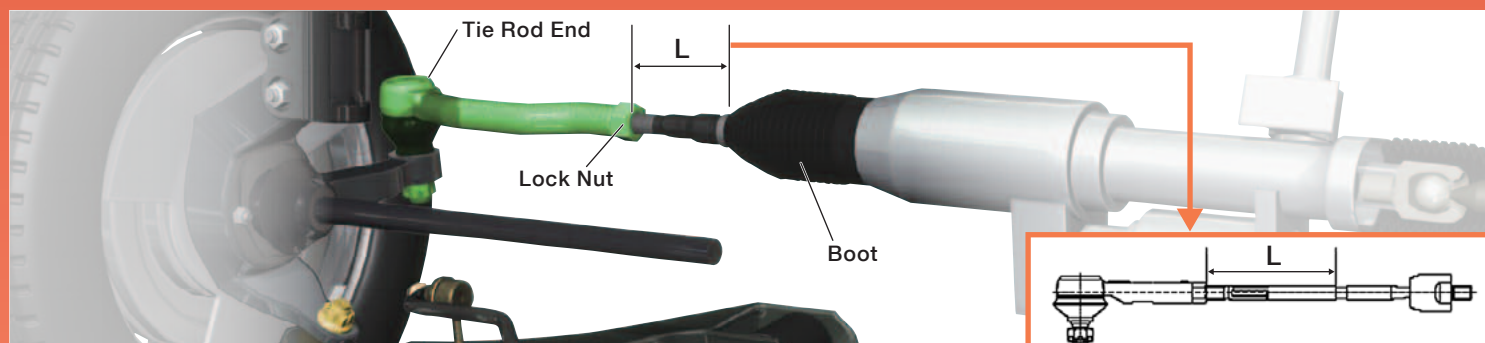

※ If the steering wheel remains unstable, please check the maintenance manual and adjust the alignment.

